

AuRiCo

AuRiCo settings

SW5	SW6	SW7	SW8	Interval
OFF	OFF	OFF	OFF	5 sec
OFF	OFF	OFF	ON	10 sec
OFF	OFF	ON	OFF	15 sec
OFF	OFF	ON	ON	20 sec
OFF	ON	OFF	OFF	30 sec
OFF	ON	OFF	ON	45 sec
OFF	ON	ON	OFF	60 sec
OFF	ON	ON	ON	90 sec
ON	OFF	OFF	OFF	120 sec
ON	OFF	OFF	ON	150 sec
ON	OFF	ON	OFF	180 sec
ON	OFF	ON	ON	210 sec
ON	ON	OFF	OFF	240 sec
ON	ON	OFF	ON	Adjust
ON	ON	ON	OFF	Turbo 3 s
ON	ON	ON	ON	Turbo 2 s

AuRiCo settings

SW1	SW2	SW3	Rotation time
OFF	OFF	OFF	0,2 sec
OFF	OFF	ON	0,4 sec
OFF	ON	OFF	0,5 sec
OFF	ON	ON	0,6 sec
ON	OFF	OFF	0,7 sec
ON	OFF	ON	0,9 sec
ON	ON	OFF	1,1 sec
ON	ON	ON	1,3 sec

SW4 Servo reverse

SW9	SW10	Mode
OFF	OFF	No tilt action
OFF	ON	2 tilt positions
ON	OFF	3 tilt positions
ON	ON	4 tilt positions